

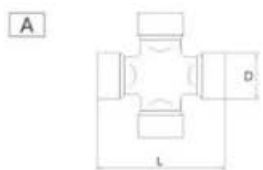
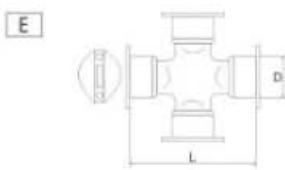
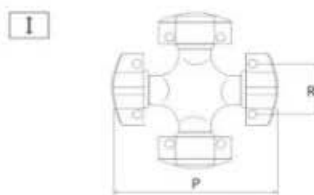
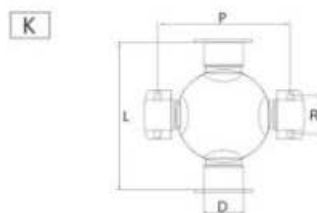
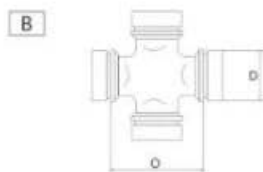
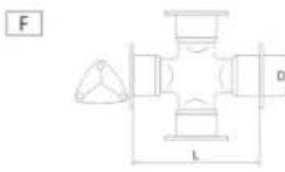
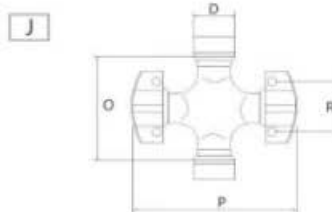
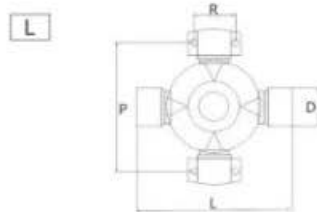


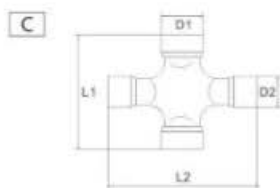


MEASURING SYSTEM FOR UNIVERSAL JOINT KITS

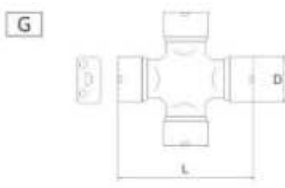

D: Bearing diameter / Is : Inside snapping / L : Outside snapping / p : Centering / R : Bolt pitch

LUBRICATION POINTS

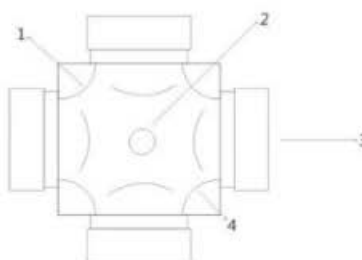

- 0: With out grease nipple
- 1: Fitting on side of cross
- 2: fitting on center of cross
- 3: fitting on end of deaving cup
- 4: Dual lude fitting on center of cross (Angle)